

Passport — *to* — *Power*

FACTORY INSTALL KIT



Select the option that applies to the power meter you're shipping or dropping off to 4iiii.

Visit our [website](#) for the most current crank compatibility list.

Shipping Factory Install

Left (non-drive) Side:

PRECISION

Podium

Shipping Factory Install Carbon

Right (drive) Side Upgrade:

PRECISION

Podium

Shipping Factory Install

Right (drive) Side Upgrade:

PRECISION

Podium

Shipping Factory Install

Carbon Dual:

PRECISION PRO

Podium Pro

Shipping Factory Install Dual:

PRECISION PRO

Podium Pro

Dropping off Factory Install:

PRECISION

Podium

PRECISION PRO

Podium Pro

Shipping Factory Install Carbon

Left (non-drive) Side:

PRECISION

Podium



Crank Preparation Tips

DUAL POWERMETER

Remove the chainrings from the drive side crank arm
(except for Shimano PRECISION PRO install).

SHIMANO

Remove the bolt and clips from the crank.

CANNONDALE

Remove and keep the crank arm fixing bolt.

SRAM

Leave the crank arm retaining bolts installed on the crank arm.

PRAXIS

Leave the crank arm retaining bolts installed on the crank arm.

FSA


Leave the crank arm retaining bolts installed on the crank arm.

CAMPAGNOLO

Leave the crank arm retaining bolts installed on the crank arm.




Follow these steps to fulfill your order.

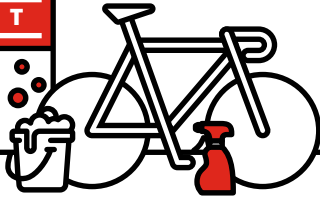


1. **Clean the crankset** while it's attached to your bike.

2. **Using a AAA battery as guide, check the clearance between your existing left crank arm and your bike.** The AAA battery is 10mm thick, PRECISION is 8mm thick and Podiium is less than 7.15mm thick).

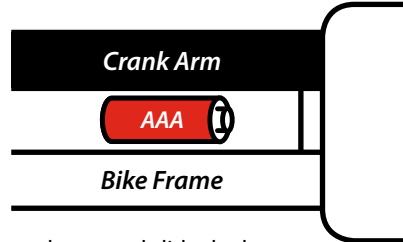


3. **Locate a flat installation surface** for the left crank arm and slide the battery along the crank. If there are areas where the AAA battery does not have clearance, note the areas where the battery touches either side and mask those spots with a light adhesive masking or painter's tape – **do not** use duct tape, labels, or double sided tape.

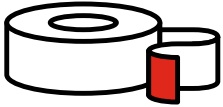

Carbon Crank Instructions ONLY:

The installation point of the powermeter will be at the standard position. Ensure there's clearance between the bike frame and crank arm for the powermeter in the standard location. The powermeter will be mounted on your crank arms between the low limit of 50mm from the center of the bottom bracket, to a maximum of 120mm from the center of the bottom bracket. The exact location is determined by the brand, make, and model of the carbon crankset.

Note: Bikes with bottom mounted brakes are not carbon-install compatible.

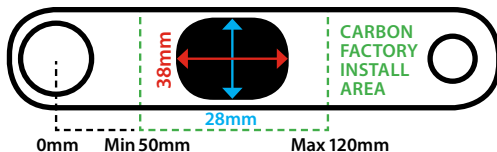

4. **Take a picture** of your frame and left crank to show the clearance. Include the AAA battery to provide reference and email your picture to support@4iiii.com.




Note: This step does not apply to Carbon cranks.




I am not sending a photo but have followed the required steps to ensure clearance for a Factory Install.

5. **Remove your left crank arm** from your bike according to your crank manufacturer's instructions.
6. **Complete passport checklist and review crank preparation tips.**
7. **Log onto the 4iiii Dealer portal** through 4iiii.com and complete required fields.

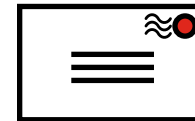

8. **The shipping details will be generated via portal.**

9. **Place the passport in the box with the crank** and call **FedEx** for pick up.
1-800 GO FEDEX

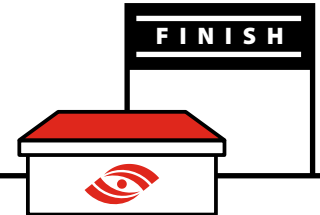

If you do not have the original Factory Install box and use your own box, the size **cannot exceed 27cm x 22cm x 21cm**. Exceeding this will be subject to additional freight charges at your expense.

To obtain extra Factory Install boxes, contact your local 4iiii Sales Representative or contact sales@4iiii.com.



Delivery Details

Please complete the following:

Contact

First and Last Name _____

Phone Number _____

Email _____

Shipping label will be emailed to this address

Return Address

House or Unit Number _____ Street _____

City _____ Province _____

Postal Code or Zip Code _____ Local pick up

Crank Details

Crank Type/Model _____

Length _____ Order Number _____

Date of order (Month/Day/Year) _____

Signature _____



Delivery Details

You ship us your crank arm and 4iiii installs your new powermeter.

- Shipping time may vary depending on your location.
- Estimated installation time is **5-8 business days.**
- Once your installation is complete, we will ship the unit back to you and provide a **tracking number.**
- Shipping times may also vary based on the shipping option you select when completing your order.



Passport Stamp

4iiii Authorized Area





    4iii.com